

Use and Maintenance

- SW5500

ATTENTION! Do not use the machine before you have read and understood the Instructions for use manual



1. Check the diesel fuel tank level/LPG bottle/battery level.



2. For the battery model, check the battery compartment is clean.



3. Check that the main broom can freely rotate and is free from ropes or debris.




4. In case, remove the main broom and clean it.



5. Check the height of side brooms and their wear condition. In case, adjust the height by rotating the knob.



6. Before sweeping check for any dust leak and, in case, operate the filter shaker to clean the main filter from dust.

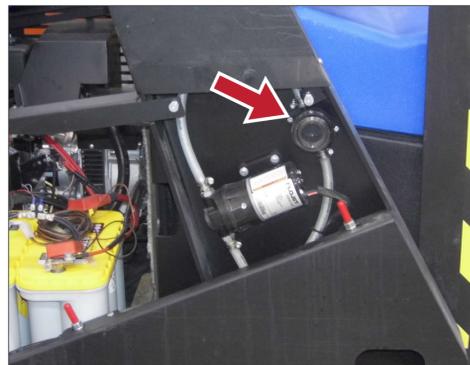

7. If the machine is equipped with DustGuard/misting system, remove the right plastic cover and check the the water filter.



8. If the DustGuard/misting system (optional), does not work properly, remove the nozzle filter and clean it.



9. Check that the skirts are at the proper height and good condition before sweeping.



If the machine has been used until flashes the battery level indicator on the display machine, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.

PLEASE ENSURE RED SOCKET IS LEFT DISCONNECTED AFTER RECHARGE IF THE MACHINE IS NOT TO BE USED ON A DAILY BASIS